EFNOTE DRUMS

EFNOTE PRO series
EFNOTE Aura series
EFNOTE 3 / 5 / 7 series
EFNOTE mini series

ASIO Driver
Installation Guide


EN

Install

* The ASIO driver is required only for Windows PCs.
* For the latest supported OS information, refer to the EFNOTE website (p. 4).
* Restart is required after the installation.
* The USB connectivity is not guaranteed for all environments. Some computers may not be fully compatible.

1

EFNOTE Aura
EFNOTE 3/5/7
EFNOTE mini




setup_EFNOTE_vXXXX

EFNOTE PRO




setup_EFNOTE_PRO_vXXXX


2

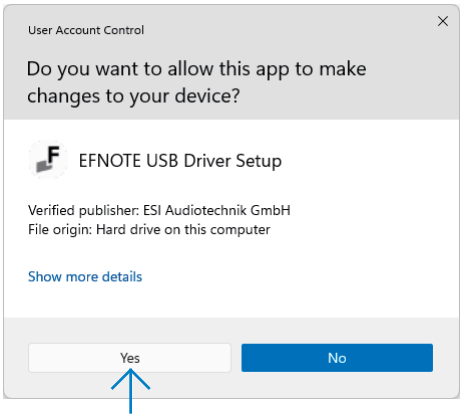


3

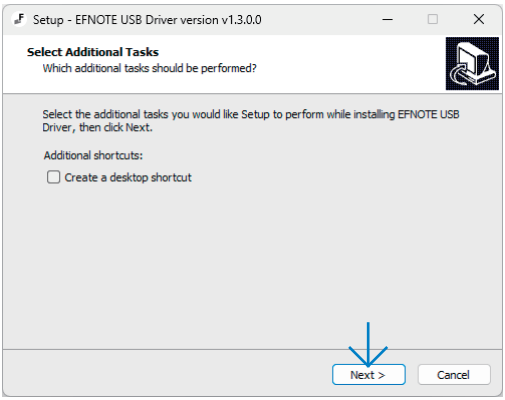


4

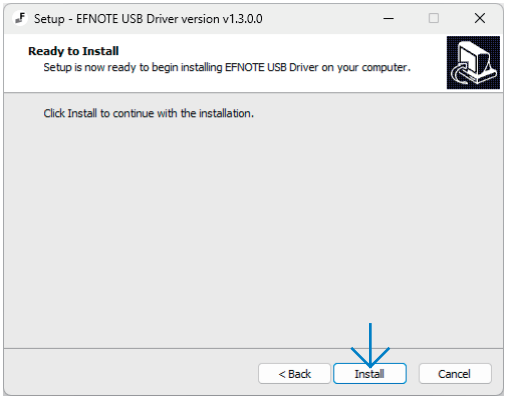

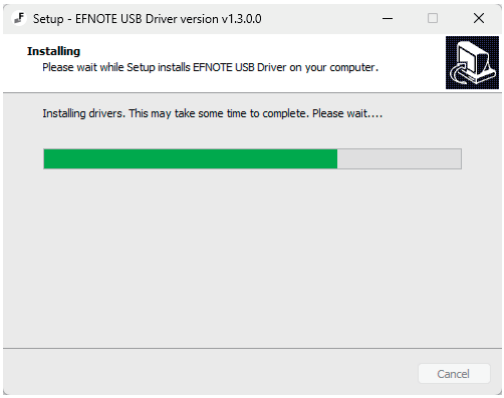

5

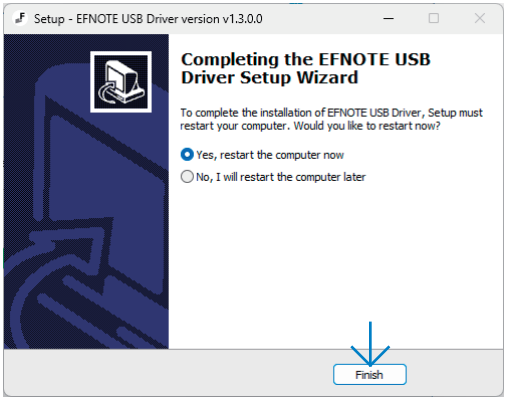


Uninstall


You can uninstall the driver from the Windows Settings > Apps.

Settings

1

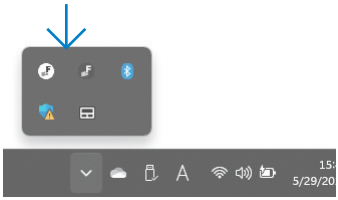

2

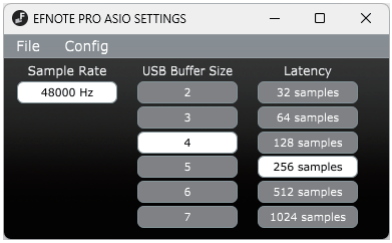

In cases like the following, increasing the USB Buffer Size or Latency settings might solve the problem.

- Some dropouts, clicks, or pops occur on the audio-streaming
- DAW or audio recording software shows an error because of buffer underrun

* Depending on your computer environment and OS version, audio issues such as noise may persist.
* The sample rate setting cannot be changed.
* DAW software might change the latency setting.
* Even if the settings window is closed, the driver continues to work.

For the latest information, please refer to the EFNOTE website.

ef-note.com/support

* Specification and design are subject to change without prior notice.
* Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation.
* ASIO is a trademark and software of Steinberg Media Technologies GmbH.
* Company names or product names etc. appearing in this document are the registered trademarks or trademarks of their respective corporate owners.

© 2026 Ef-Note Inc.