EFNOTE Aura

70 Series

EFDAR7-STDSET

Assembly Guide

CAUTION

Before using this product, read "IMPORTANT SAFETY INSTRUCTIONS" in the Quick Start Guide.

EN

Obtaining Manuals and Apps

For the manual PDFs, Apps, and other latest information, please refer to the following web page.

Reference Guide PDF

EFNOTE Tools (Mobile) app
EFNOTE Desktop Tools app

ef-note.com/support/efnoteaura

* All illustrations and screenshots appearing in this document are for the purpose of explaining, and may differ from the actual product or specifications.
* Company names, product names etc. appearing in this document are the registered trademarks or trademarks of their respective corporate owners.
* EFNOTE is a trademark or registered trademark of Ef-Note Inc.

For EU countries, UK

CE

Ef-Note Inc. hereby declares that the type of radio equipment EFNOTE Aura 70 (EFDAR7-STDSET) complies with Directive 2014/53/EU.
The full text of the EU Declaration of Conformity is available at : ef-note.com/compliance

Packing List

Aura 70 / 71 / 72 / 73

	EFNOTE Aura 70 series Box 1	
	Sound Module Set (EFD-AURA)	
A	14" Snare Drum (EFD-S1455)	1x
B	Hex Key	1x
C	11" Rack Tom (EFD-T1180)	1x
D	15" Floor Tom (EFD-T1515)	1x
E	Floor Tom Leg	3x
	Assembly Guide	1x
	EFNOTE Aura 70 series Box 2	
F	20" Kick Drum (EFD-K2015)	1x
G	Beater Patch	1x
H	14" Hi-Hat Cymbals (EFD-H14II)	1x
I	Hi-Hat Plug Coupler	1x
J	16" Crash Cymbal (EFD-C16II)	1x
K	20" Ride Cymbal (EFD-C20II)	1x
	EFNOTE 7 Series Hardware Set (Optional)	
L	Snare Stand	1x
M	Cymbal Stand	2x
N	Tom Mount	1x

Aura 71


	EFNOTE 7 Series Expansion Pack 1 (Refined)	
R	10" Rack Tom (EFD-T1070)	1x
S	18" Crash/Ride Cymbal (EFD-C18II)	1x
N	Tom Mount	1x
M	Cymbal Stand	1x
P	Trigger Cable (4.0m)	3x

Aura 72


	EFNOTE 7/5 Series Expansion Pack 2 (Refined)	
T	8" Rack Tom (EFD-T0865)	1x
U	17" Effect Cymbal (EFD-C17FX)	1x
V	8" Splash Cymbal (EFD-C08)	1x
N	Tom Mount	1x
M	Cymbal Stand	1x
W	Splash Cymbal Mount	1x
P	Trigger Cable (4.0m)	3x

Aura 73

	EFNOTE 7/5 Series Expansion Pack 3 (Refined)	
X	13" Floor Tom (EFD-T1313)	1x
Y	18" Crash/Ride Dark Cymbal (EFD-C18II-D)	1x
Z	18" China Cymbal (EFD-C18CH)	1x
M	Cymbal Stand	2x
P	Trigger Cable (4.0m)	4x

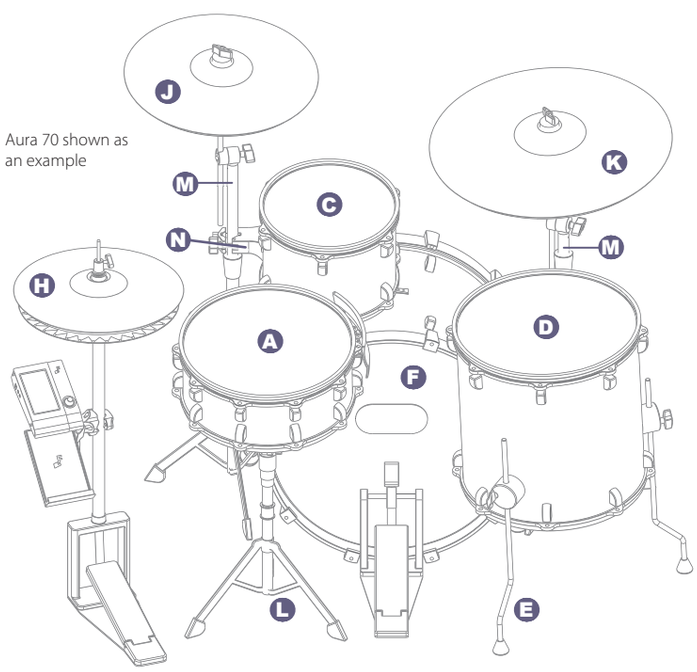

Aura 70 shown as an example

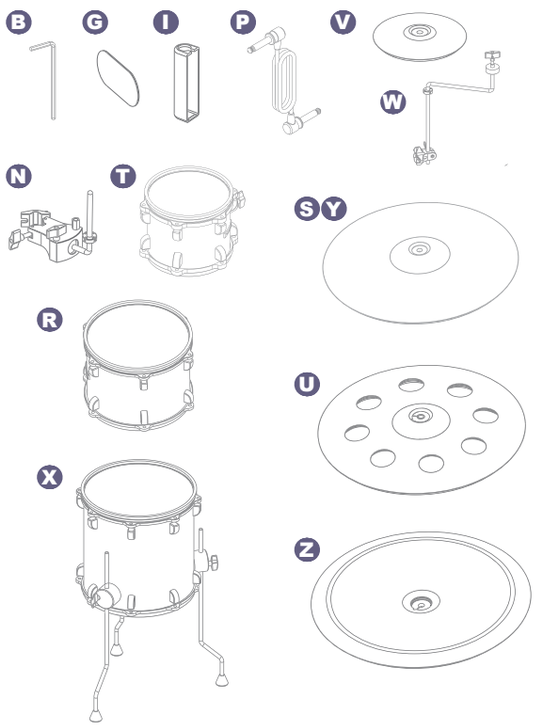

NOTE


The hardware shown in this manual, such as the kick pedal, hi-hat stand, snare stand, and cymbal stands, are optional and will only be included in certain packages. For more details, please contact the store where you purchased the product.

Kit Assembling


NOTE Please be careful not to injure yourself during assembly.

Aura 70 / 71 / 72 / 73


1

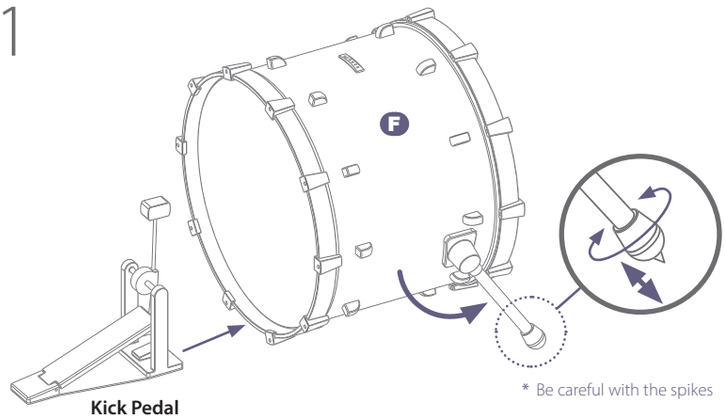

2

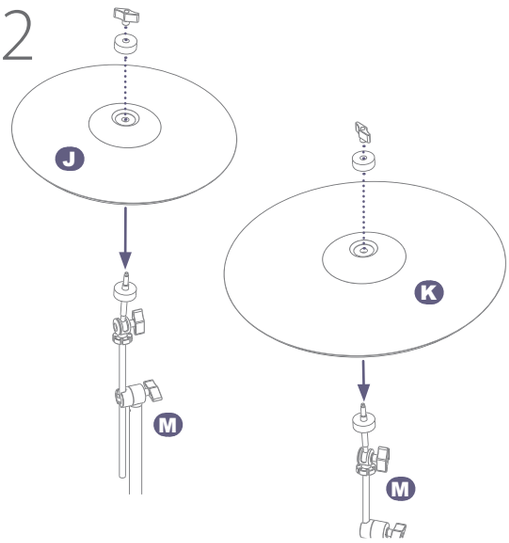


3

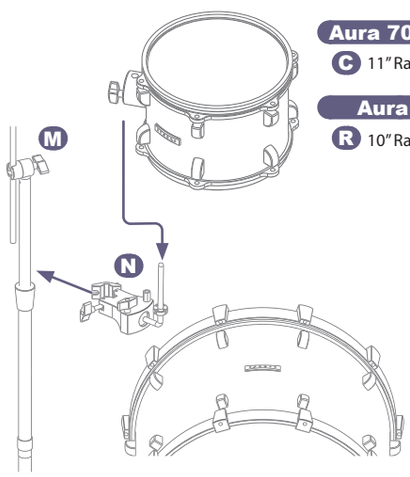


Aura 70 / 72 / 73
C 11″ Rack Tom

Aura 71
R 10″ Rack Tom


4

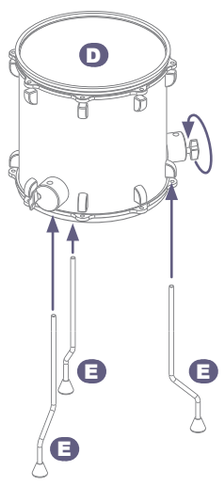


5

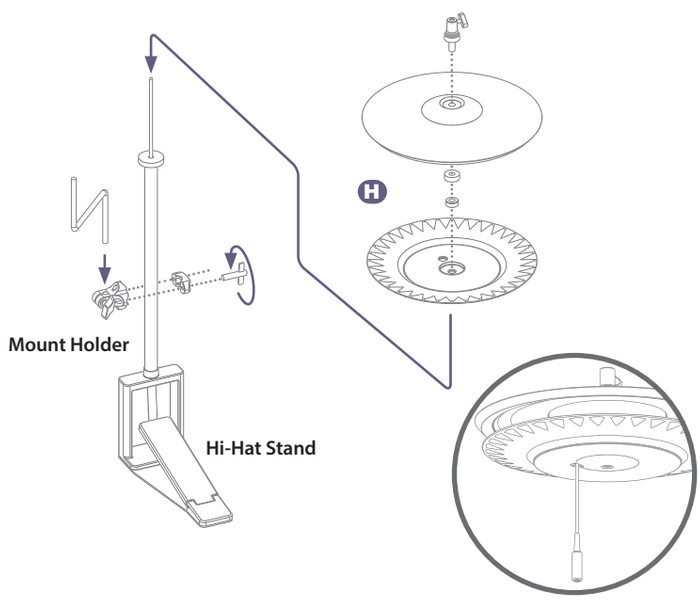

6

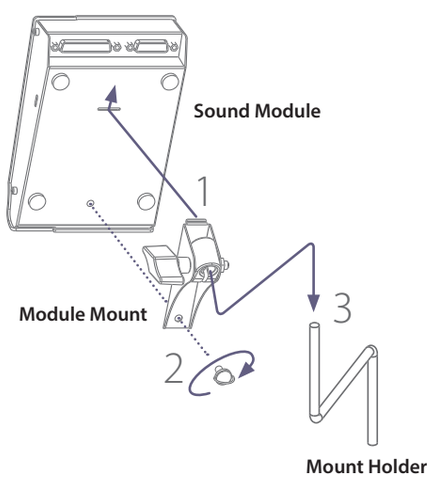

7

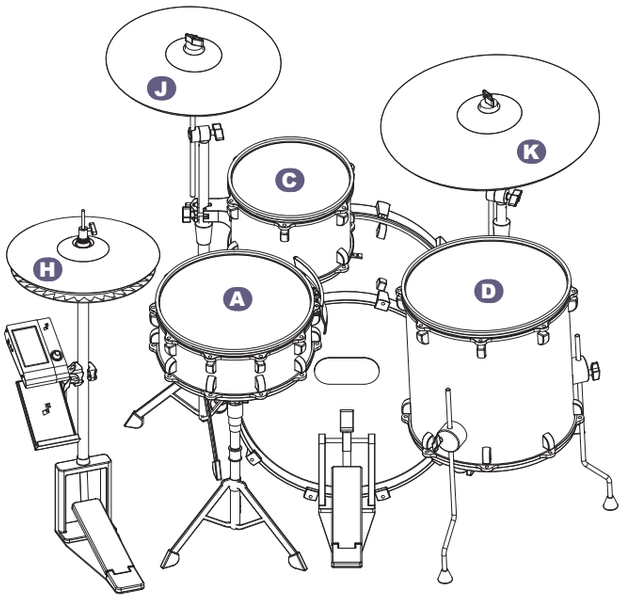

Attaching the Beater Patch

Attach the beater patch to the kick head where the beaters make contact.

NOTE

* Playing without the beater patch may damage the head.
* The beater patch is a consumable item. Replace it when it becomes worn.




CAUTION

* Be sure to securely tighten all knobs and bolts.
* Make sure that all stands are stable.


Aura 71 / 72 / 73

8 Set up the other drums and cymbals in the same way.


Aura 71

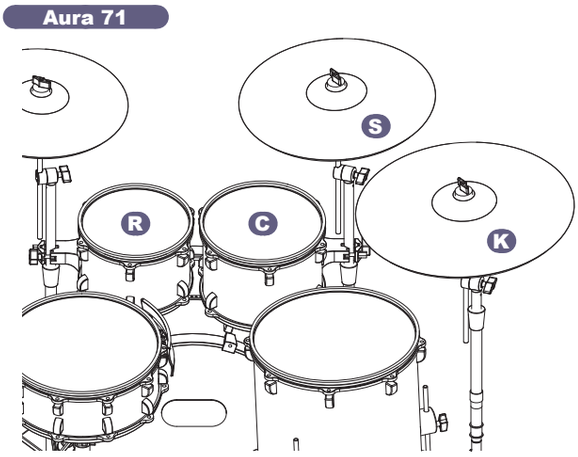


Aura 73

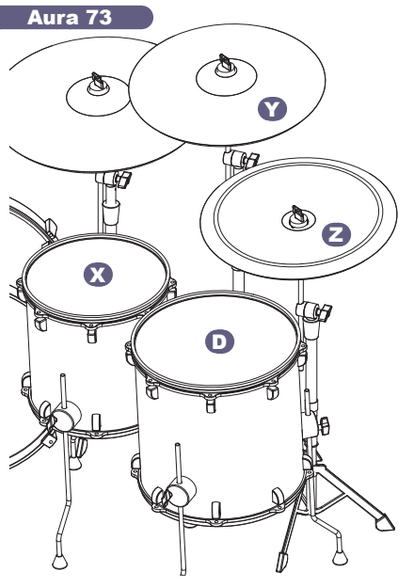

Aura 72

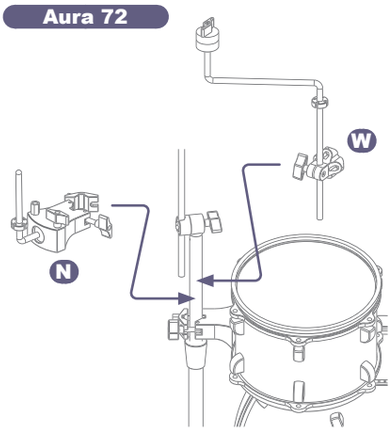

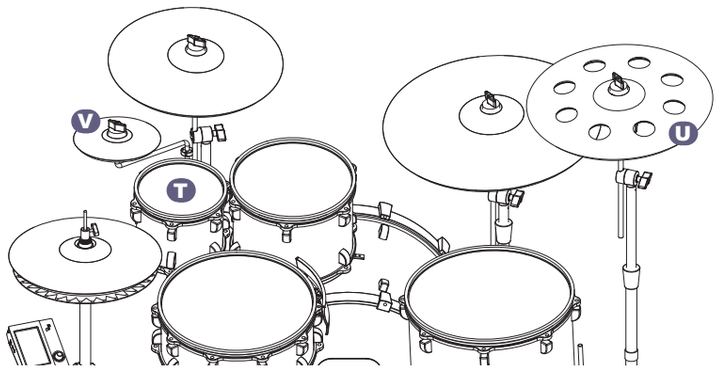


CAUTION


* Be sure to securely tighten all knobs and bolts.
* Make sure that all stands are stable.

Drum/Cymbal Pad Connections


Connect the trigger cables as shown below, referring to the input labels on each cable.

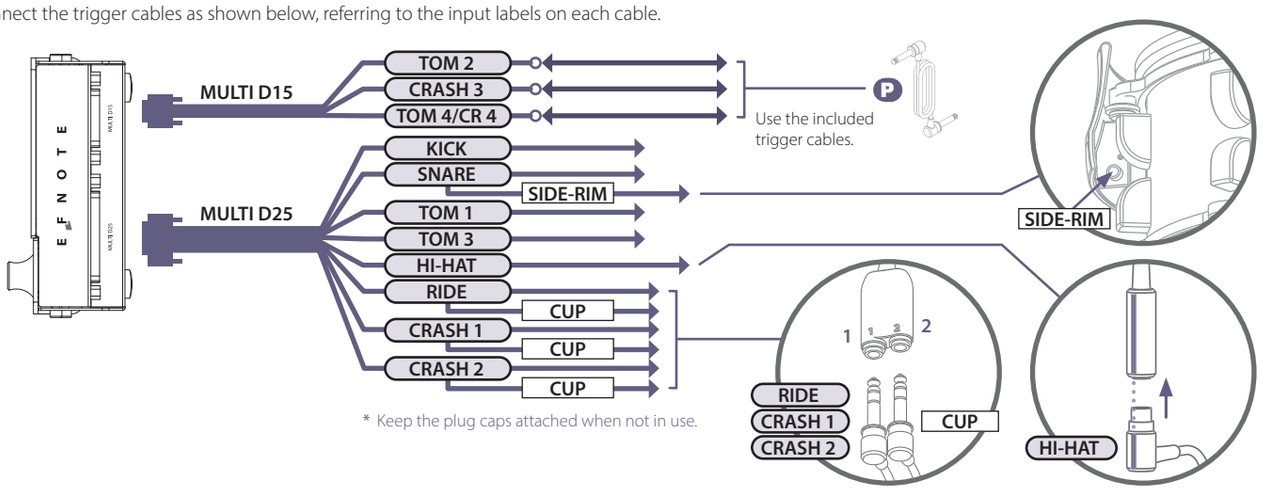

Aura 70

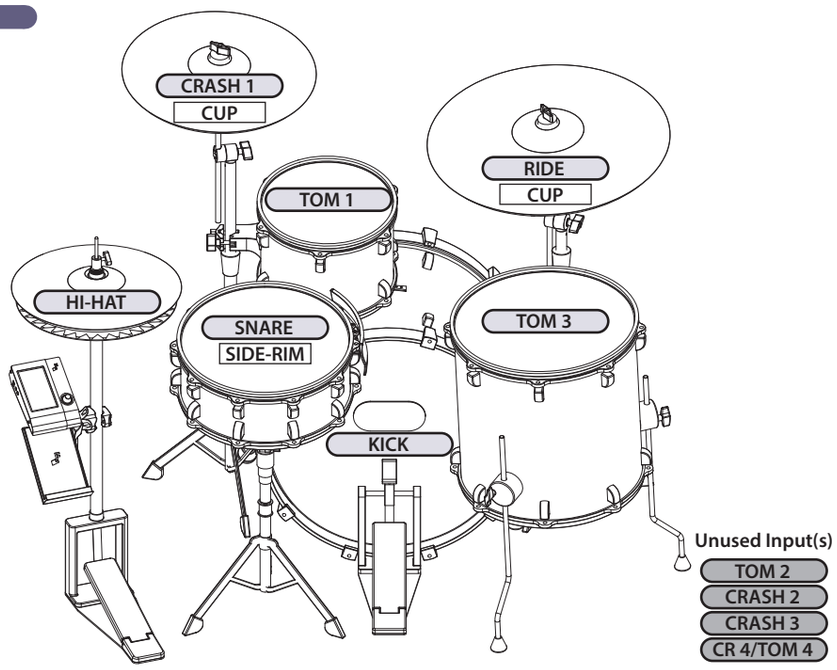


Aura 71

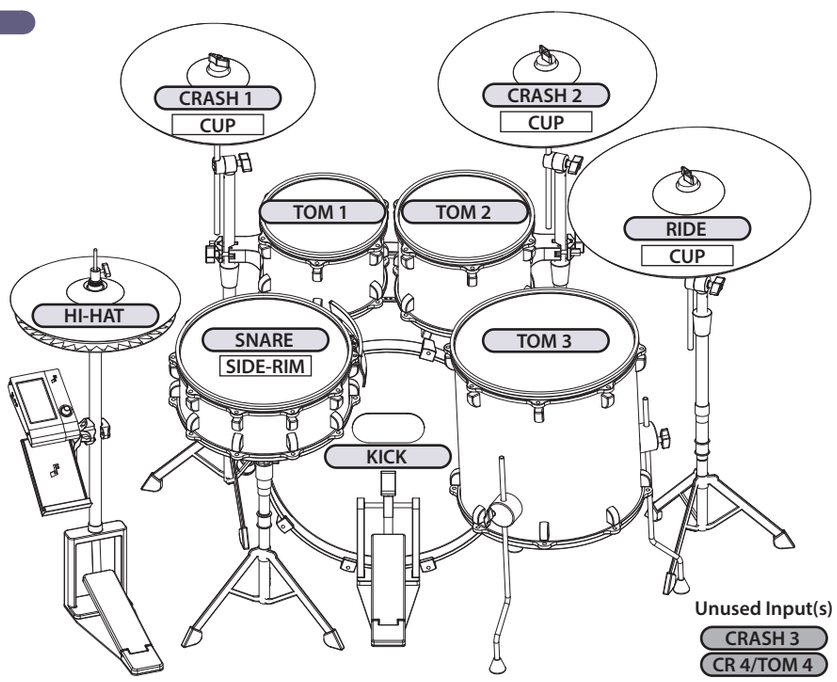


Attaching the Hi-Hat Plug Coupler


To prevent the hi-hat cable from being accidentally pulled out, attach the included hi-hat plug coupler to the hi-hat connectors.

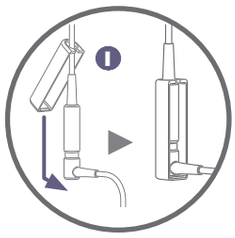

Securing the Cables


To prevent the trigger cables from accidentally disconnecting, secure them using ties or clamps.

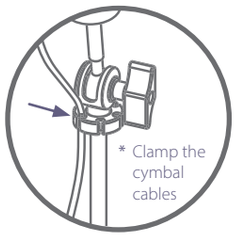

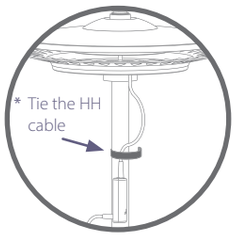

Aura 72

* The TOM 4/CR 4 switch must be set to **CRASH 4**.

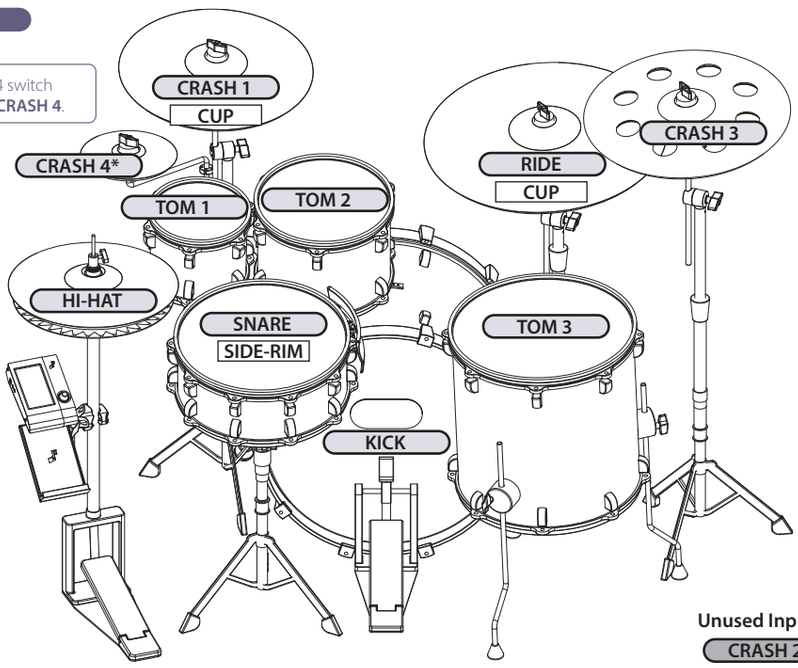


Unused Input(s)

CRASH 2

Aura 73

* The TOM 4/CR 4 switch must be set to **TOM 4**.

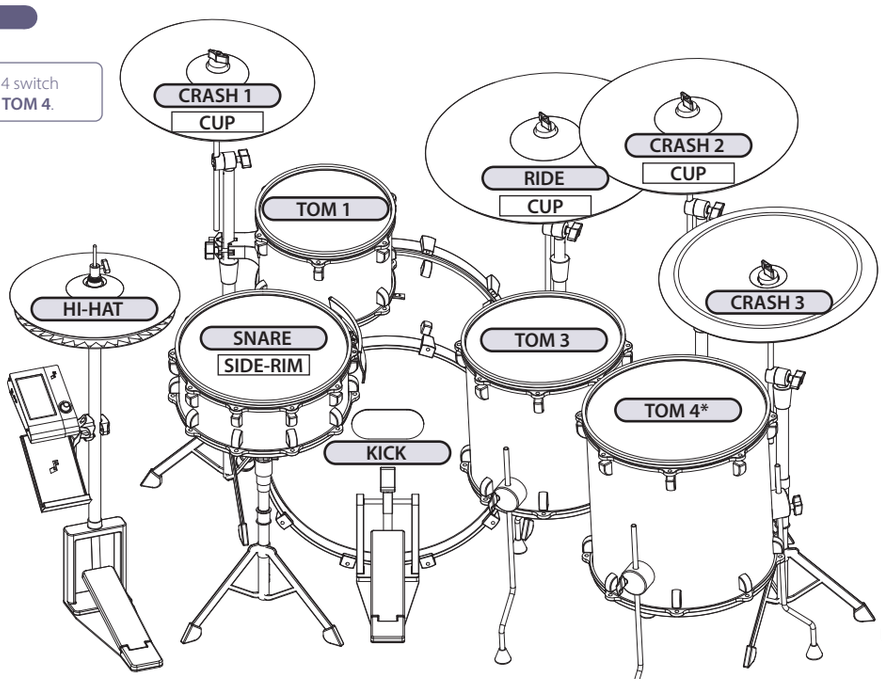


Unused Input(s)

TOM 2

Adjusting the Side-Rim Position

The side-rim can be adjusted laterally to your preferred position.
Loosen the bolts shown in the figure using the included hex key, adjust the position, and then retighten the bolts.


The side-rim can also be mounted on the left side of the snare drum, if you prefer.

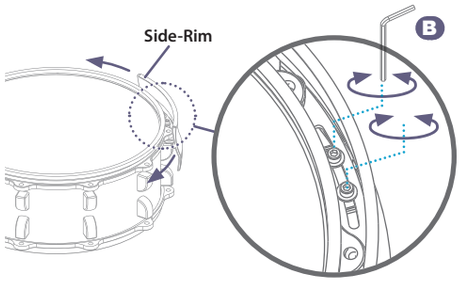

Adjusting the Head Tension

Ensure the mesh drum head is properly tensioned before use, as low tension can cause inconsistent sensitivity.
Use the tuning key to tighten the bolts as needed, making sure to keep even tension across the head.
Head tension will naturally loosen over time with use. Periodically check and adjust the tension.

* The mesh drum head and hoop rubber are consumable items. Replace them immediately if damaged.

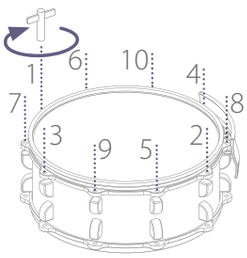

* For more details about individual components, please refer to the Optional Components Reference Guide available on the website (page 2).

After Connecting Pads

After setting up your pads, be sure to complete the configuration and calibration steps below.

1 Make sure the pad model settings on the sound module match the pads connected.

[MENU] --> [TRIGGER] --> [Overview] tab

Aura 72 The TOM 4/CR 4 switch must be set to CRASH 4.

Aura 73 The TOM 4/CR 4 switch must be set to TOM 4.

* You can easily set the default pad configurations for Aura 70/71/72/73 using the EFNOTE Tools (Mobile) app (page 2).

2 Calibrate your hi-hat.

[POWER] knob --> [HH Calib.]

3 Adjust the Global Pan settings to match the positioning of your pads.

[MENU] --> [GLOBAL PAN]

For instructions on how to operate the sound module, see the Quick Start Guide and Reference Guide (page 2).

Support

If you have any questions about the product, please visit the product support page on our website.
For further inquiries about the product, as well as information regarding repairs and spare parts, please contact your local authorized distributor listed on the following web page.

Product Support
ef-note.com/support/efnoteaura

EFNOTE Authorized Distributor List
ef-note.com/distributors

Product Support

Distributors

E F N O T E

ef-note.com

© 2026 Ef-Note Inc.