
Product Illustration


EN

Thank you for purchasing this complete set of NEEWER Lights. You can control this product with the NEEWER Home app to elevate your home decoration.


Package Contents



Base ×1

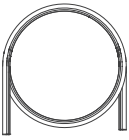

Light strip ×1



Controller ×1



Multi-section extension stand ×4




Connector ×4



Screwdriver ×1




Screw ×16



Power adapter ×1

Product Illustration

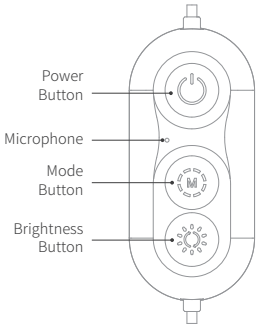

Power Button:
Power on/off (short press).
Reset (long press for 5 seconds).

Microphone:
For the Music Modes.


Mode Button:
Short press to cycle through 7 modes: Warm White, Cool White, Scene 1, Scene 2, Scene 3, Music Mode 1, Music Mode 2.

Brightness Button:
Short/long press to adjust brightness.


Assembly Steps

EN

1. Align the screw holes on the connectors with those on the extension stand then use the screwdriver to fasten the screws.

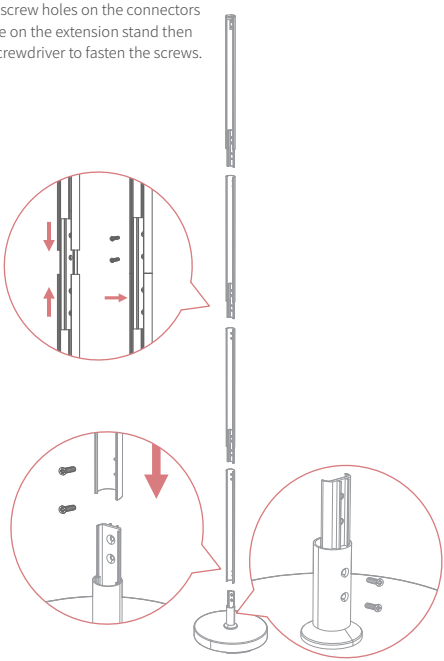


2. Connect the power cords of the light strip and the base.

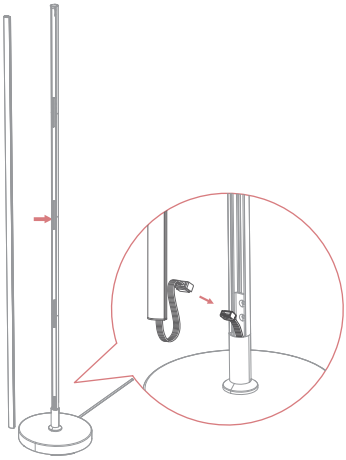


Assembly Steps

EN

3. Press the light strip into the slots on the stand in the indicated order.

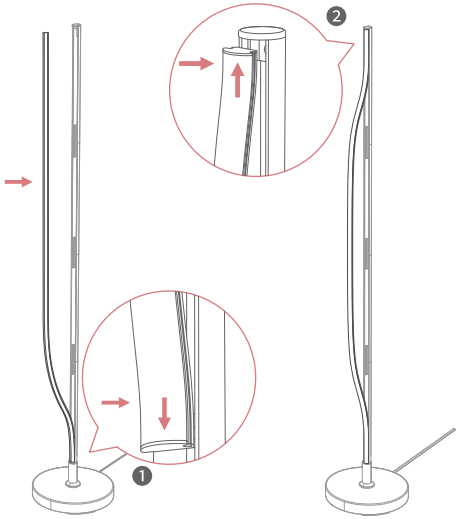

4. Plug the power adapter into the lamp base and connect to a power outlet.

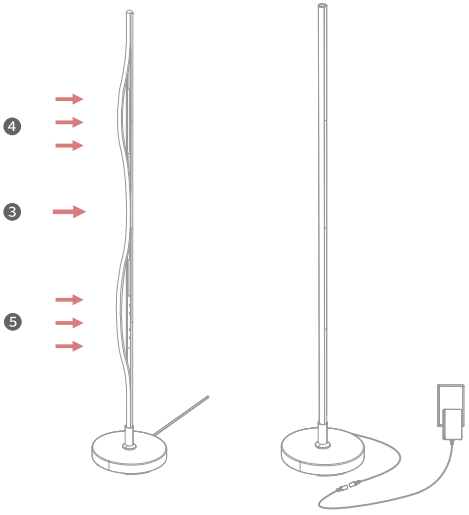

How to Use

EN

Using the floor lamp:

Connect it to the **NEEWER Home** App

1. Download the **NEEWER Home** App from App Store (iOS) or Google Play (Android).

2. Enable Bluetooth on your phone. Open the app, tap the "+" icon at the top right, and search for "**NF04**".
   Tap the device icon and follow the prompts to complete pairing.

3. Only 2.4GHz Wi-Fi routers with 802.11 b/g/n are supported. 5GHz networks are not compatible.

Android **iOS**

Troubleshooting

1. The lamp cannot be powered on
a. After plugging in, long-press the power button for 5s, then press once.
b. Check if the contacts on the power cords are securely attached.

2. The lamp cannot connect to NEEWER Home App
a. Make sure Bluetooth is enabled on your phone.
b. Keep the connection range within 66ft/20m. If the device has already been added but is not responding, remove it from the app and reconnect.
c. Make sure your Wi-Fi router is 2.4GHz, not 5GHz.
d. Make sure you entered the correct password during the Wi-Fi setup.

Safety Precautions

1. Do not drop or hit the product to avoid damage.

2. Ensure the stand sections are securely fastened to prevent tipping.

3. Use only the included power adapter. Using incompatible adapters may cause fire or an explosion.

Specifications

Model	NF04
Input	DC 24V/1A
Color	RGBW
Operating temperature	-10° to 40°C/14° to 104°F