
Product Overview


EN

The NEEWER X11 is a professional teleprompter for live streaming, video recording, and online conferencing. It features an 11" multicoated beamsplitter with 75% light transmittance and a detachable 9" HD display that supports screen mirroring. It can also double up as a secondary monitor for computers. The adjustable camera mount and Arca quick-release plate support cameras up to 2kg, while additional holders accommodate webcams and smartphones up to 8.5cm wide. The teleprompter is easy to set up and offers two cold shoes for accessory mounting. It supports two connection methods: DP USB-C (plug-and-play and driver-free) or mini HDMI (supports USB-A 3.0 and later, drivers required). The drivers and app are available to download from our official website.


Package Contents

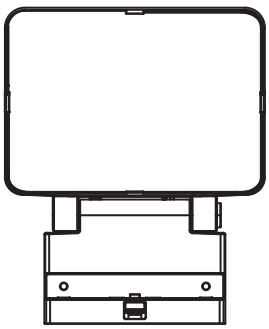

Teleprompter ×1

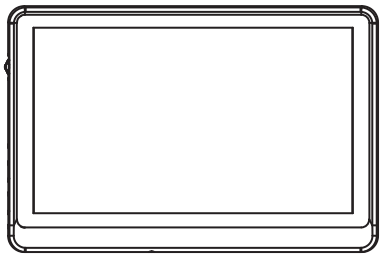


TM8 Display×1

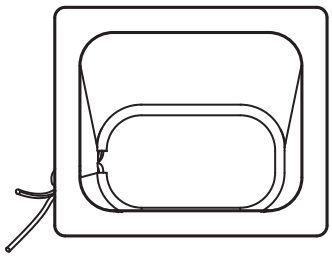

Anti-Glare Hood×1




DP USB-C Cable×1




USB-A to Mini HDMI + USB-C Cable×1

Package Contents


EN

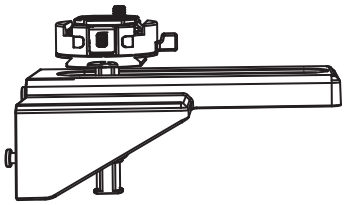

Camera Mount×1




Webcam Mount×1

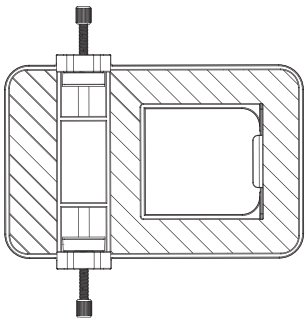

Phone Clamp×1

Product Illustration

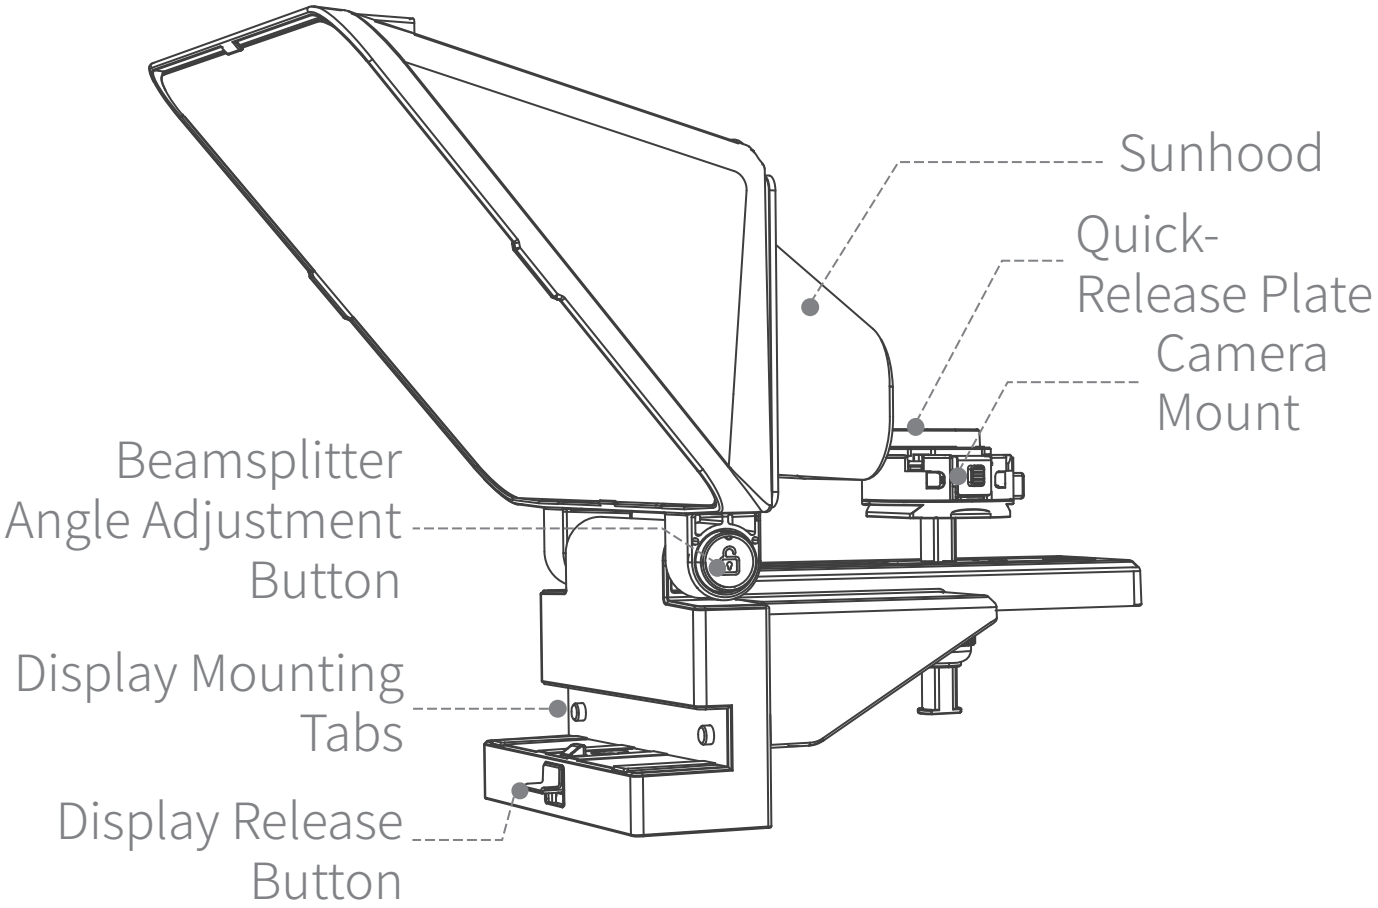

Product Illustration





Dial
Press: Screen mirroring
Turn Left/Right: Brightness adjustment
Supports input signal switching

Mini HDMI Port

USB-C Ports

Installation Instructions

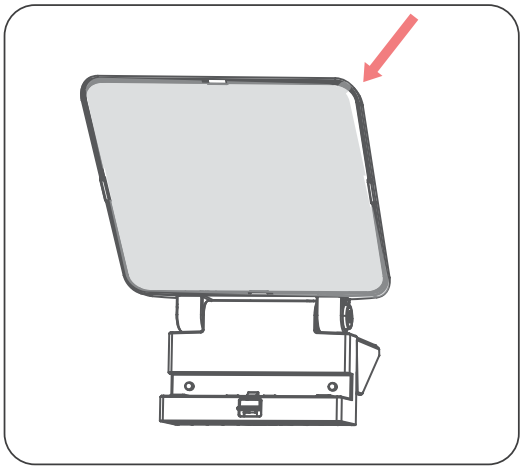

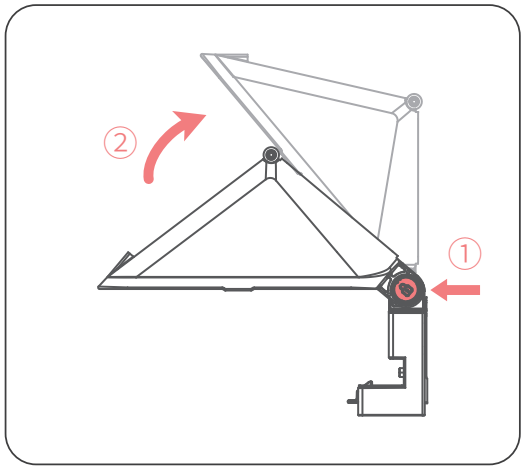

- Removing the protective film


Peel off the protective film from the beamsplitter glass panel before first use.

- Adjusting the beamsplitter angle

Press the adjustment button and lift the beamsplitter to a suitable angle.


Installation Instructions

EN

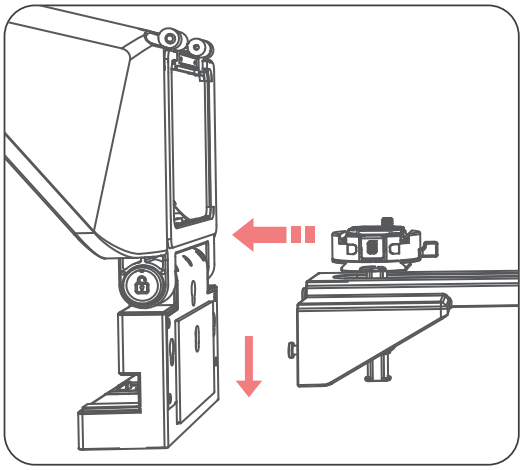


● Installing the camera mount

Align the camera mount with the mounting slots on the back of the teleprompter, then insert and slide downward until locked.

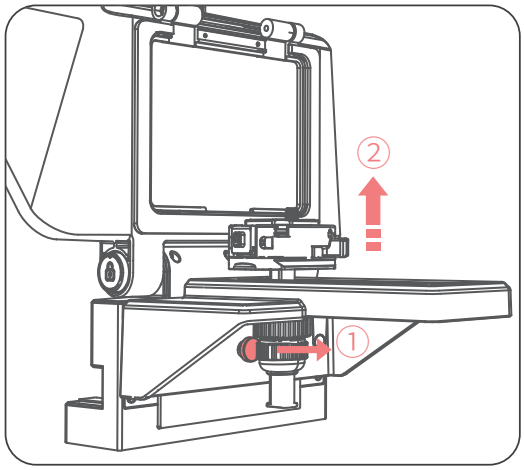


● Removing the camera mount

Pull the spring latch outward and lift the camera mount to remove.

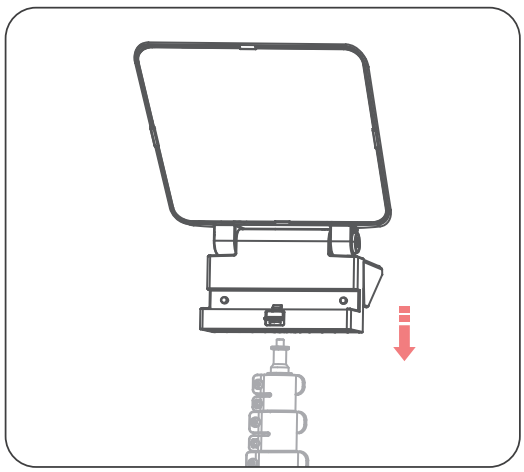

● Connecting the tripod


Connect the teleprompter to a tripod via the 1/4" and 3/8" threaded holes on the base.

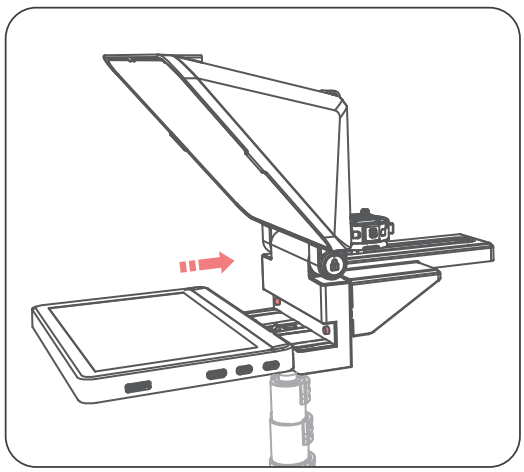

● Installing the display

Align the display with the mounting tabs and push until securely locked.


Installation Instructions

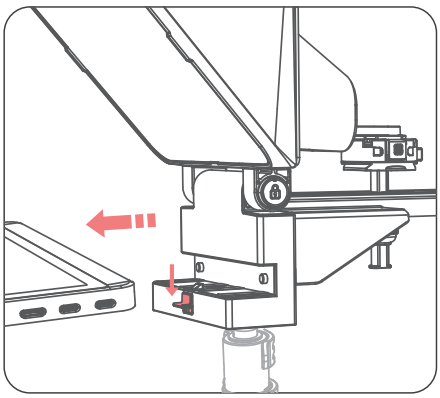


- Detaching the display

Press the release button to instantly detach the display.


- Installing the camera:

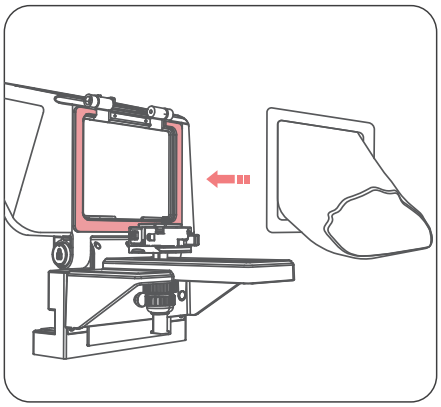


1. Attach the hood piece to the back of the teleprompter with the edges aligned.

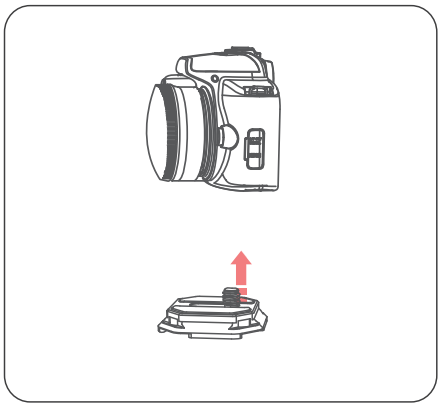

2. Ensure the quick-release plate is securely attached to the base of your camera.

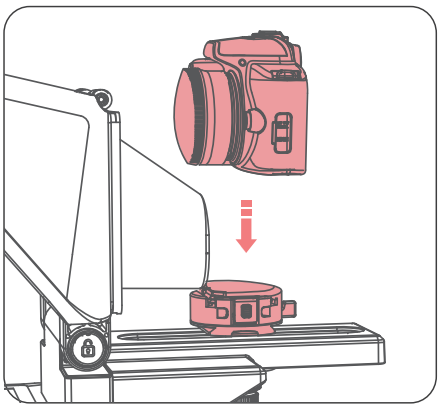


3.Mount the camera onto the camera mount with the quick-release plate.

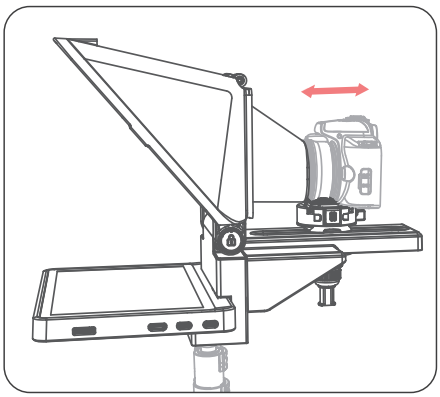


4. Cover the lens with sunhood and seal it.


Installation Instructions

- Installing the webcam

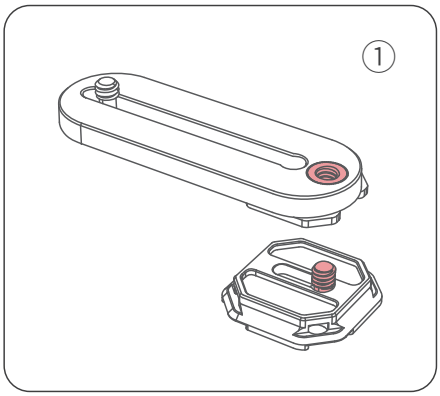

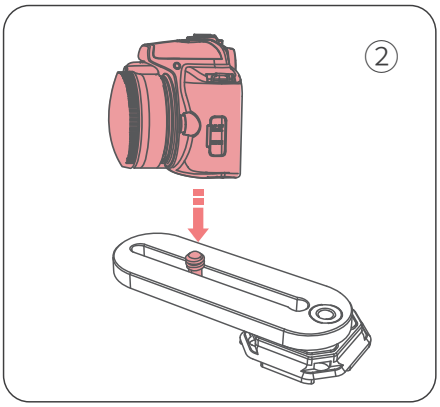


1. Attach the webcam mount to the quick-release plate.
2. Mount the webcam onto the webcam mount.
3. Secure the webcam to the camera mount using the quick-release plate.

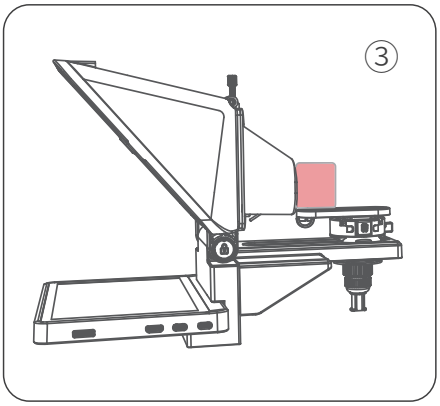


Installation Instructions

EN

- Installing the smartphone

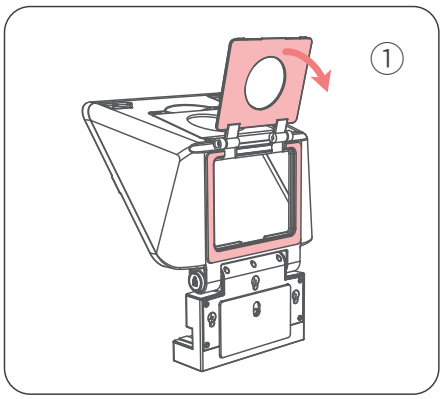


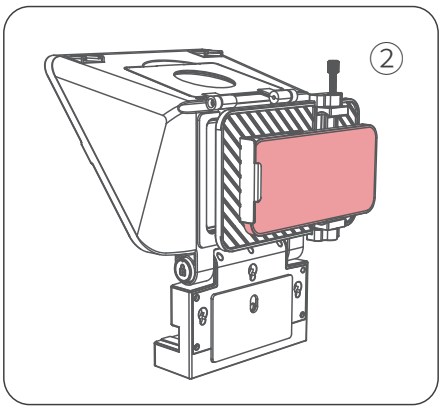

1. Lower the flap with the circular opening

2. Insert the smartphone into the phone clamp.


3. Make sure that the phone's camera lenses are aligned inside the circular opening.

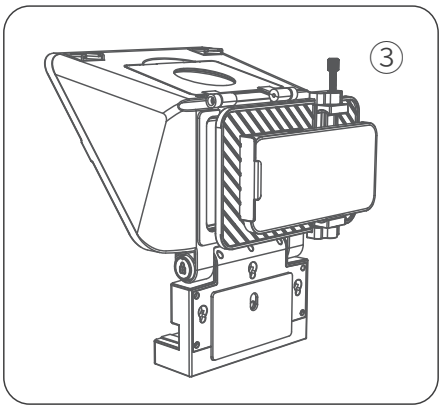

※Tutorials relating to the X11 set-up and use are available on the NEEWER official website (neewer.com).


- Connecting to the computer

1. Via the Display Port (DP) USB-C cable (recommended):

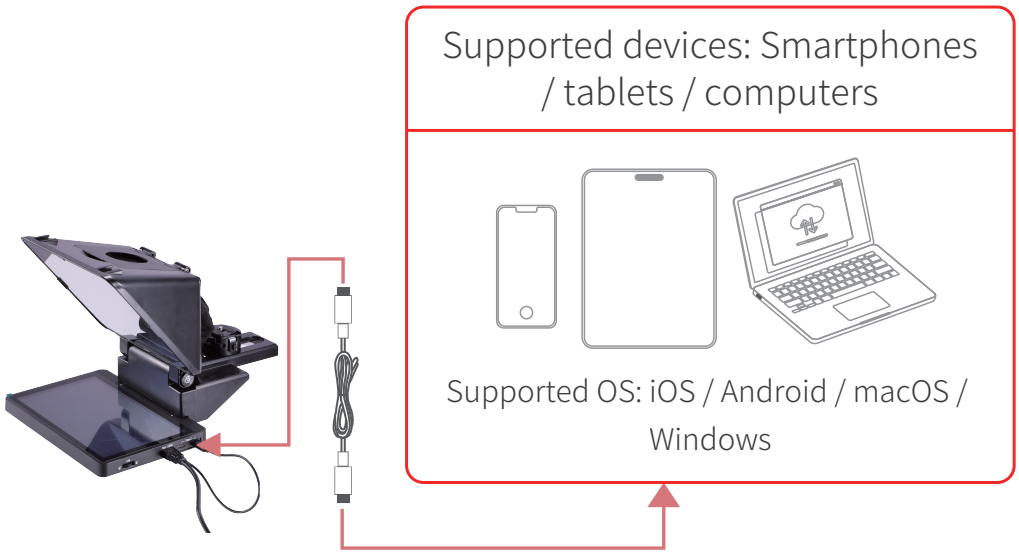

※Make sure the USB-C port on your device supports the Display Port (DP) protocol. Use the included DP USB-C cable as the preferred option. If using a third-party USB-C cable, ensure it also supports the DP protocol.

2. Via the USB-A to Mini HDMI + USB-C cable (driver required on computer)

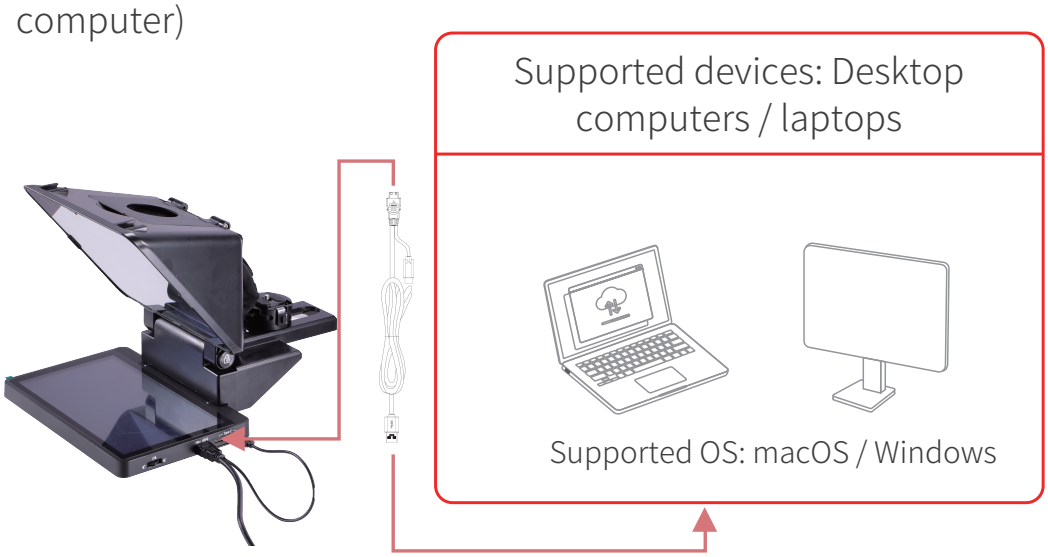

※Note: Please make sure the USB-A port on your computer supports USB 3.0 and later.

3. Installing the driver: Connect the USB-A to Mini HDMI + USB Type C cable to a USB-A port on your computer. The driver icon will appear on the desktop or File Explorer.

① PC



② MAC



③ Scan the QR code below to read instructions on how to use the NEEWER Teleprompter app.

After installing the driver as instructed, restart the computer to complete the device connection.

※If errors occur during the installation of the driver, please visit the X11 product page on the NEEWER official website for detailed instructions.

NEEWER official website: https://neewer.com

- Connecting to the mobile app

1. Scan the QR codes below to download the app for your smartphone or tablet.

iOS

Android

Device Compatibility

- **Supported devices**

  Phones, tablets, and computers

- **Supported OS**

  iOS, Android, macOS, Windows, Linux

Laptops

Apple

MacBook 12, MacBook Air (2018~2020), MacBook Air (M1~M4), MacBook Pro (2016~2024), Mac mini(2018~2024)

Dell

XPS13/15/17, Inspiron14Pro/15/16Pro/16Plus, Vostro13/14/15/16/16Plus, G15, Latitude13 and later

HP

ZHAN 66, ZHAN 99, ZHAN X, ZHAN X13/14/15/16, ZHAN X Ultra, OMEN 4 Pro, OMEN 5/6/7/8/9/10/11 Series, OMEN MAX 16, HyperX OMEN 15/16/MAX 16, ELITEBOOK Series

Lenovo

YOGA 13s/14c/14s/16s, YOGA Pro 14s/16s2025/2026, XIAOXIN15/Air14/Air15/Pro/Slim 5iUltra, Lgion7000/7000P/R7000/R7000P/Y9000P/Y9000K/R9000P/R9000K, Legion 5/5i/5 Pro 2025/2026 and later, ThinkPad Series, ThinkBook Series

Device Compatibility

EN

Laptops

Huawei

MateBook 13/13s/14/14s/16/16s/14 Core Ultra/16Core Ultra/Pro 2026, MateBook X Series, MateBook E Series, MateBook D Series, MateBook GT Series

Xiaomi

Air 12.5/13.3，Pro 14/15/16，Pro X14/X15

Smartphones

Huawei

HUAWEI P20 and later, HUAWEI Mate10 and later

Samsung

Galaxy S8/S8/S9/S9/S10/S10e/S10 and later, Galaxy Note8/9/10/10+/20/20 Ultra, Galaxy Z Fold Series, W20 and later, Galaxy A90

Honor

Magic 3/Magic 3 Pro/Magic 3 Pro+ and later, Honor Foldable Series, Note 10, V20

OPPO

Find N Series: Find N2, Find N3
Find X Series: Find X2 Series, Find X3 Series, Find X5 Series, Find X6 Pro, Find X7 Ultra
Others: R17 Pro, Reno 10x Zoom, Find X8 Series, Find X9 Series

Device Compatibility

Smartphones

OnePlus OnePlus 9 and later	**realme** realme GT5 Pro and later
vivo vivo X100 Pro, X90 Pro, X90 Pro+, X Fold+, X80 Pro Snapdragon, X80 Pro Dimensity, X Fold, X Note, X70 Pro+, X100 Ultra, X200 Series, X300 Series	**Nubia/Redmagic** Nubia: Z50, Z50S Pro, Z50 Ultra, Z60 Ultra Redmagic: Redmagic 7/7S/7SPro/7Pro, Redmagic 8Pro/8Pro+/ 8S Pro/8S Pro+, Redmagic 9Pro/9Pro+ and later
Black Shark Black Shark 4 Series, Black Shark 5 Series, and later	**Apple** iPhone 15, iPhone 15 Plus, iPhone 15 Pro, iPhone 15 Pro Max, iPhone 16, iPhone 16 Plus, iPhone 16 Pro, iPhone 16 Pro Max, iPhone 17, iPhone 17 Pro, iPhone 17 Pro Max
Xiaomi Xiaomi 14 Series, 15 Series, 17 Series	

Device Compatibility

Tablets

Huawei HUAWEI M6, MatePad Pro, MateBook E,MateBook E Go and later	**Samsung** Galaxy Tab S4/S6/S7/S7+/S8/S8+ /S8 Ultra/S9/ S9+/S9 Ultra/S9 FE/ S9 FE+ and later
Lenovo All Lenovo tablet models	**Microsoft** Surface Pro 7/7+/8/9, Surface Go2/3 and later
vivo/iQoo vivo Pad Air, vivo Pad2, vivo and later	**Apple** iPad mini6/A17 Pro/A19 Pro and later iPad 10/11/12 and later, iPad Pro Series

※ Devices mentioned above may become incompatible after operating system updates. If compatibility issues occur, please contact our customer service.

※ Make sure your device supports DP (USB-C ports) or USB 3.0 (USB-A ports).

※ The teleprompter is compatible with most new devices. If incompatibility occurs, please contact our customer service team.

Specifications

Model	X11
Beamsplitter Size	11"
Light Transmittance	75%
Optimal Reading Range	2.5m
Material	Plastic + Multicoated Glass
Compatible Devices	DSLR/Mirrorless Cameras, Webcams, Action Cameras, Smartphones
Supported Lens Length	11cm
TM8 Display	
Display Size	9"
Brightness	600nit
Resolution	1024*600p
Dimensions	226.6 x 151.3 x 17.5mm
Contrast	800:1
PPi	180
Viewing Angles	80°H/80°V；80°/80°(L/R)80°/80°(U/D)
Power	10W
USB-C Input	5V/2A
Connection	DP USB-C Cable / Mini HDMI Cable
Compatible Devices	Smartphones / Tablets / Laptops